



FEATURES

- The OEM 12V Battery Tester Allows You Always Know Your Battery and Alternator's Condition.
- Connects with the negative terminal
- Red probe connects with positive terminal

SPECIFICATIONS

- Operating Temperature: 0-40°C
- Relative humidity: 30% – 90%
- Input voltage range: 8 ~ 15VDC