

VALVE CORE TORQUE TOOL MT751040





FEATURES

- Used for the Tpms valves to maintain proper pressure.
- Both a core remover and precise installer.
- Prevents triggering Tpms due to low pressure.
- Prevents premature tyre failure due to leaking valves.
- Easy to use.

SPECIFICATIONS

• Torque limit: 45Ncm (+-6%) / 4In/lb (+-6%)