



FEATURES

- Necessary For Pre-Tensioning Self Adjusting Clutches Before Removal Or Installation
- Prevents Plate Distortion Which May Prevent The Clutch From Disengaging Or Cause Dragging.
- Features A Refitting Tool, Allowing The Clutch Adjuster To Be Wound Back, And Six Alignment Adapters.
- Supplied In Carry-Case

SPECIFICATIONS

- Main clamp
- Spigot Adaptors: Ø15/23, Ø15/28, Ø15/34, Ø21/23, Ø20/23, Ø14/15/20mm
- Assembly Flywheel Threads: Ø6×1.00, Ø7×1.00, Ø8×1.25mm
- 4 x Screw mounting pin Stepped adaptor Flywheel locking tool