

FRONT WHEEL BEARING TOOL

M060421023





FEATURES

- Used to Replace the Front Wheel Bearing
- Without Removing theSteering Knuckle & Strut Assembly, As the Spindle
- Assembly is Not Removed There is No Need to Align the Front End, Applicable with Hydraulic Press